




B: Bottom edge of the seal to the end of the Banner 19,5 cm

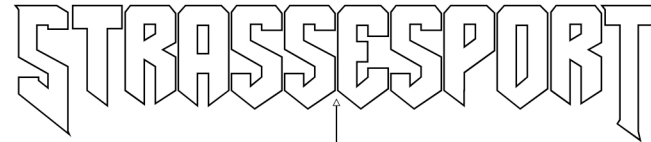

Exact center of the text.

Thoroughly clean the glass beforehand.

If needed, spray water on the adhesive side of the black matte film to help align it.

The same applies to the **STRASSESSPORT** lettering

Carefully push the water out from underneath the film afterwards.

Ideally, after applying, park the car in the sun so that the remaining water can evaporate and the film can settle perfectly on the glass.

Good luck!